


RAIN SHIELD INSTALLATION INSTRUCTIONS

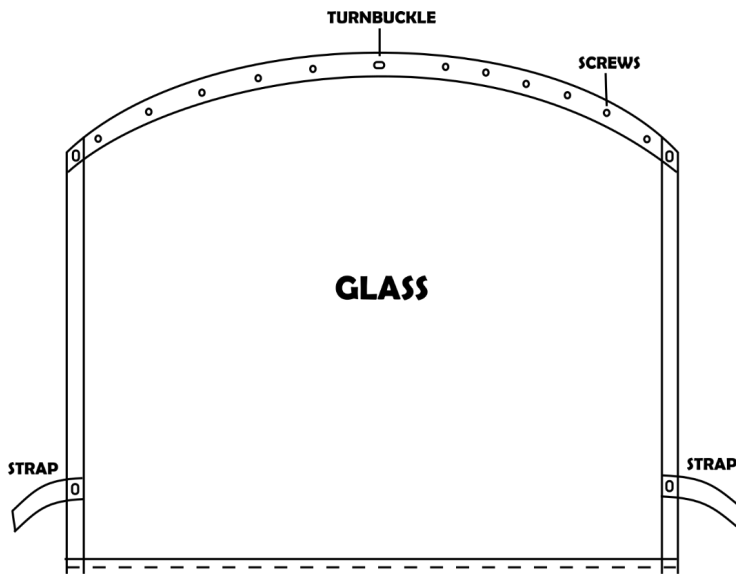

HARDWARE KIT

14 SCREW STUDS (snaps)

3 TURNBUCKLES

6 TECH SCREWS

1. With your existing bimini, buggy, or hard top in the open position, locate the center of the frame (between port & starboard).
2. Install a turnbuckle to the bottom side of the frame, as close to the center as possible, using 2 self tapping screws provided. (You may mount the turnbuckle over your fabric sleeve or make a small slit in your fabric sleeve).
3. Find the center turnbuckle receiver on your rainshield and slip it over the turnbuckle you just attached. (the open portion of the snaps on the rain shield should be pointing upward).
4. Turn the end of the turnbuckle in either direction 90° to hold the turnbuckle in place.
5. Work your way from the center outward on either side and attach self tapping screw studs provided, where the snap heads are located.
6. Locate where the two outside turnbuckle receivers on the rain shield. Attach turnbuckles with 2 self tapping screws provided.
7. Repeat step 4 on each side.
8. Locate where you can tie down webbing straps to a rail, support, etc, down near the deck area. Run the end through your tie down location and into the cam-loop fastener fold over the cam lever to hold the strap tight.